


# CLASSIC **PORSCHE 924, 928 & 944**

**SPF2367KSS** - Front Upper  
Wishbone Kit of 4 Bushes &  
4 Stainless Steel Tubes (for  
Alloy Wishbone), 928 pre  
1989

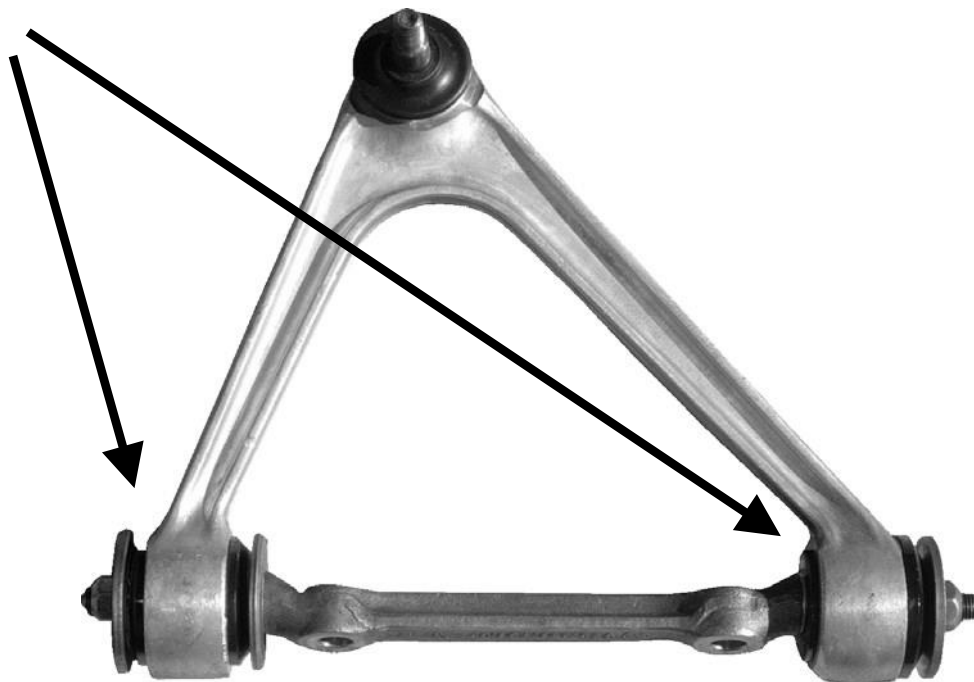


# Fitting Instructions SF300-2367KSS

## PORSCHE 928

### *Upper Wishbone Inner Kit*

- Remove the upper wishbones from the car.
- Press out the rubber bushing from the control arm. Clean the inside of the arm eyes making sure that all rubber residue has been removed and that all the inner surfaces are clean.
- Use the assembly lubricant supplied and apply it to the outside and the inside of the new bushes, as well as the inside of the housings on the arms. (All the bush surfaces in contact with the arms and the crush tube must be coated with the assembly lubricant provided)
- Push the new bushes into the housings noting orientation of bushes and washers as per drawing below.
- Apply grease to the outside of the crush tubes and install the crush tubes into the bushes.
- Install Wishbones onto the vehicle making sure that the washers are installed on the inside of the arm, as per drawing below;

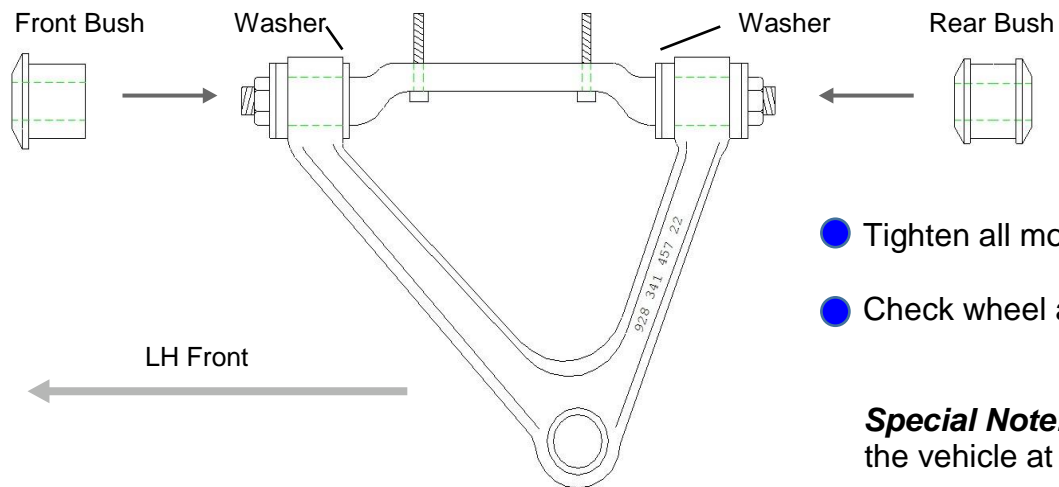

- Tighten all mounting nuts and bolts to the manufacturers torque specifications.
- Check wheel alignment

**Special Note:** Upper control arm main retaining bolts should be tightened with the vehicle at ride height